


TOLL-FREE ORDERING (866) 482-8919

For discounted pricing please visit www.deiequipment.com

Wax-o-Matic®

SPEED FINISHER

You have purchased a device that will immediately change your concept of applying floor finishes. Your Wax-o-Matic® Speed Finisher is capable of applying all varieties of finishes, sealers and gym coats, both water and solvent base, in a fast, even, economical and fully controlled manner.

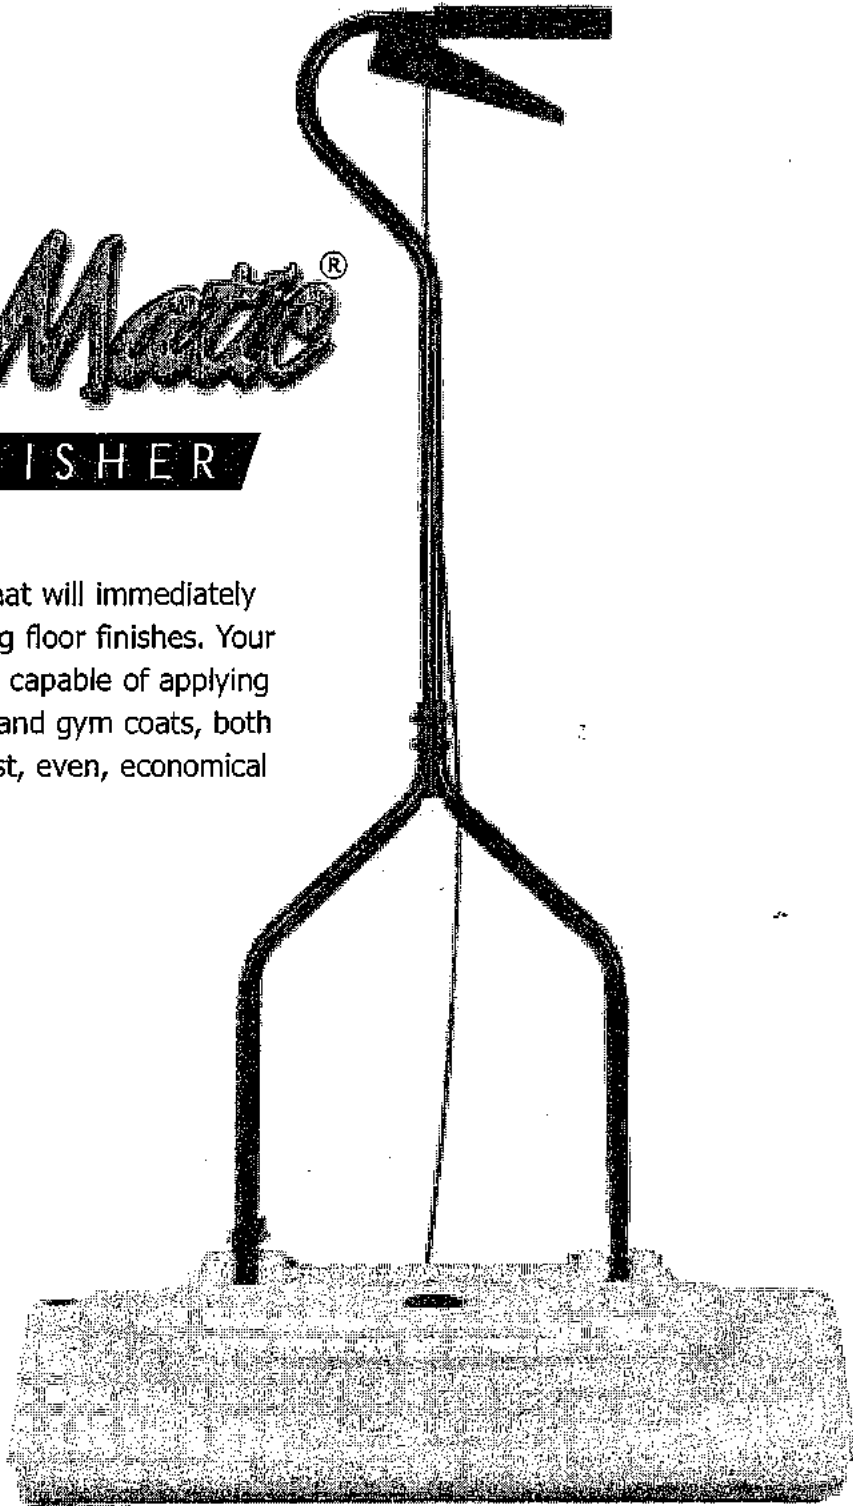

ASSEMBLY

1. Remove all contents from carton.
2. Begin assembly by attaching the lower left and right handle to the tank with the nuts and bolts provided.
3. Lower handle with preassembled Handle Release Lever attached, must be connected to the left side of the tank.
4. Attach the lower left and right handle assemblies to the upper handle with the nuts and bolts provided.

PREPARATION

To prepare for use, make the following arrangements:

1. Make sure floor area to be covered is dust free by dust mopping. Use looped-end wet mop to remove dirt and stains. A solvent-soaked rag will remove stubborn dirt.
2. Remove the lid and pour finish into tank. It is better to pour at least one gallon of finish into the tank, even though less might be used.
3. Wheel the Wax-o-Matic® to the area to be finished.

At the start, or when learning how to use:

1. Dispense a small amount of finish by fully depressing the actuator level on the handle. Note that as you depress the actuator level you will see a puddle of finish begin to develop across the back of the machine.
2. With the handle in the lowered position, push and pull the Wax-o-Matic® a foot or so to initially get the wick pads soaked with the finish. Again dispense a small puddle and begin to pull the unit by backing up. As you do so, you will be able to see how fast the puddle is diminishing. Learn how to maintain this puddle by pulsing at regular intervals as you go down the work area.
3. **IMPORTANT:** Before you reach the end of the work area you must completely use up the puddle of finish. Stop dispensing finish approximately 10' to 15' before stopping point. Pull Wax-o-Matic® in a straight line, not allowing it to angle to the right and left.
4. Continue to follow this procedure until you are satisfied you are getting the results you want and become accustomed to operating the unit.
5. Now you are ready to turn around so you are walking forward while pulling the unit and dispensing finish.

A few hints for best results:

1. Do not over dispense finish or hold the actuator lever down while walking or you will flood finish around the ends of the unit, leaving heavy edges on the floor.
2. Do not pulse the unit at the end of the work area where you will be stopping.
3. There are two ways to turn the unit around at the end of a isle or work area:
 - a) While still moving, push the handle down toward the floor. Pivot the Wax-o-Matic® around to a slight overlap position for return. Raise the handle back up and continue applying finish.
 - b) When reaching the end of an isle rotate the unit by dragging it around. This will leave a rounded area which can be later lapped over when doing the cross aisle.
4. If coat is too thin, streaking or dry spots appear. The following steps should alleviate any problems:
 - a) Do not try to apply finish too light. Apply large puddle.
 - b) Dispense finish often enough to keep an even coat.
 - c) If you are desiring a heavier coat, change to heavier pads.
5. For best results, floor area to be finished should be clean from grit, loose debris or any dust.
 - a) The Wax-o-Matic® will pick up any debris as you go along and in time accumulate on the wicks causing a lack of smoothness in finish applications.
 - b) Do not allow grit to accumulate on the wicks. Periodically brush them clean with your hand or soft brush.
 - c) If dust or debris gets worked into the pads and is not allowing a smooth application, take them off and clean them or quickly replace them with a spare set.
6. Keep a towel handy when filling the unit and wipe any spillage off the Wax-o-Matic® immediately with a damp towel.
7. For best results always put at least one gallon of finish into the Wax-o-Matic® Speed Finisher.
8. Do not try to apply finish to too large an area at one time. The length of the swath should be only what you can comfortably do in 5 to 10 seconds: This will allow finish to remain wet enough so that when you overlap, the new swath will blend into the area you overlapped, without streaking.
9. The lid that covers the top of the unit can also be used as a weight to keep the same amount of pressure when the tank is not full. Just remove the cap and add water to the desired weight.

Finishing small or confined areas:

1. The Wax-o-Matic® may be pushed or pulled to get into small areas. Dispense a small amount of finish. Push and pull the Wax-o-Matic® a foot or so to work the finish into the wick pads. Slide the unit over by using the handle grip. Allowing a little overlap, pull the unit back. Follow this procedure until you complete the area.

When moving to another aisle or area:

1. Engage the handle release lever into handle base, roll the Wax-o-Matic to the next aisle, then lift the handle release lever and continue.
2. When quitting or when moving a long distance, change the handle position by lifting the handle to the upright position for ease of transporting.

Storing the Wax-o-Matic after use:

1. **IMPORTANT:** Pads should be taken off the Wax-o-Matic® as soon as work is complete. Never let the pads dry out. If they become dried out, they will stiffen and be unusable. Replace them with new pads. The pads can remain moist between uses by keeping them saturated with finish reducer. Lightly squeeze them out before reattaching to the unit.
2. After each use the unit should be emptied of all product through the drain cap located on the top of the tank. **IMPORTANT:** The unit should be cleaned inside and out thoroughly. Pour mineral spirits (for solvent base fluids) or water (for water-base fluids) directly into unit. Use a synthetic bristle brush to scrub the inside of the tank. Pulse the unit several times to clean dispensing ports. Drain unit. Wipe the outside of unit with damp cloth. **IMPORTANT:** Use only mineral spirits or soap and water. Any other petroleum distillates or thinners will void warranty as they may cause material deterioration.
3. Lightly grease dispenser shutoff pads. *ABSOLINE* →

Choosing the right refill pad:

1. For oil or solvent base solutions use the Extra Heavy refills.
(Product Code: B610000)
2. For water-base solutions use the Ultra Smooth refills.
(Product Code: B611000)

Wilten Wax-O-Matic® Speed Finish Applicator Limited One (1) Year Warranty Statement

Wilten, a division of Continental Commercial Products, LLC ("Wilten"), warrants its Wax-O-Matic® Speed Finish Applicator (the "Product") against defects in materials and workmanship for a period of one (1) year commencing on the date of original purchase. Wilten, at its option, will repair or replace any Product or part found to be defective in material or workmanship when the Product is used in accordance with directions and under conditions specified by Wilten.

This Limited Warranty shall only apply if this Product has been used and maintained properly, and has not been subject to abuse, neglect, accident, misuse, improper maintenance, alteration, vandalism, theft, fire, or damage because of other peril or natural disaster.

Wilten's Warranty shall only be effective while the original retail Product purchaser owns the Product.

Failure to follow the terms, conditions, requirements, limitations and exclusions stated in this document will void this Warranty. This Warranty shall apply only to the original retail purchaser.

This Limited Warranty does not apply to normal wear and tear associated with the use of the Product.

Any costs and expenses beyond Wilten's herein-stated liability shall be the responsibility of the owner(s). Wilten shall not be liable for any incidental, special or consequential damages, or other expenses which may arise in connection with this Warranty. The sole and exclusive remedy of the original buyer, shall be limited to the repair or replacement of defective Products or parts due to Wilten's faulty materials or workmanship.

Obligations under this Warranty shall in no event exceed the purchase price of the original Product. Any Product found to be unsatisfactory prior to use, for any reason, must not be used and should be returned to the retailer where it was purchased for replacement Product.

Wilten reserves the right to view any and all Products to determine the cause and extent of damage, defect or condition. Wilten reserves the right to deny credit or replacement or to pro-rate wear on a Product that is, in our expert opinion, being used out of the normal, intended application. This Warranty applies only when Wilten has been provided with a proof of purchase and written notification.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY DUE TO LOCAL JURISDICTION OF CLAIM.

For the Warranty to be effective, the original owner is required to return the Product, freight prepaid, along with any and all defective materials and proof of purchase to:

Wilten Products, Atlanta, GA, USA 30354.



- = English
- ▲ = French
- = Spanish

● You have purchased a device that will immediately change your concept of applying floor finishes. Your Wax-o-Matic® Speed Finisher is capable of applying all varieties of finishes, sealers and gym coats, both water and solvent based, in a fast, even, economical and fully controlled manner.

We recommend that you carefully read and observe the instructions and limitations given in this manual on the use and maintenance of the unit; this will insure maximum performance and life of your new Wax-o-Matic® Speed Finisher.

▲ Vous avez acheté un équipement qui va immédiatement révolutionner l'idée que vous vous faites de la finition des sols. Votre cireuse rapide Wax-o-Matic peut appliquer toutes sortes de finishes, de vitrificateurs et de revêtements de gymnase, aqueux et à base de solvant, rapidement, uniformément, économiquement et de manière entièrement contrôlée.

Nous vous recommandons de lire attentivement les instructions et restrictions données dans ce manuel sur l'utilisation et l'entretien de l'équipement; ceci assurera sa performance maximum et prolongera la durabilité de votre nouvelle cireuse rapide Wax-o-Matic.

■ Usted ha comprado una máquina que cambiará inmediatamente su concepto respecto a la aplicación de productos para pulir el piso. Su Wax-o-Matic Speed Finisher (Pulidora Wax-o-Matic) es capaz de aplicar todas las variedades de productos para pulir, sellar y recubrir pisos de gimnasios, a base de agua y de solvente, de una manera fácil, uniforme, económica y totalmente controlada.

Le recomendamos leer cuidadosamente y seguir todas las instrucciones y limitaciones dadas en este manual sobre el uso y mantenimiento de esta máquina; eso le asegurará máximo rendimiento y duración de su nueva pulidora Wax-o-Matic Speed Finisher.

● ASSEMBLY

- 1 Remove all contents from carton.
- 2 Begin assembly by attaching the upper and lower handle assemblies together with the bolts and wing nuts provided.
- 3 Position the kicker plate (see illustration #1) at the left rear of the tank. Insert the plate's "peg" into the hole on the side of the tank.
- 4 Insert the handle assembly into the holes on either side of the tank by flexing the handle outward.
NOTE: The handle has a black plastic wheel connector on each end. You must place the wheel connector with the metal insert onto the left side of the tank. Insure that the tongue on the inside of the kicker plate aligns with the metal insert on the wheel connector. (See illustration #2)
- 5 After the handle has been placed onto the tank, insert the handle brace rod through the holes in the lower handle assembly. Tighten the wing nuts on each side of the rod. (See illustration #3)
- 6 Attach the wick pads to the bottom of the unit.
- 7 A weight is included with the unit. Attach it to the bottom of the tank using the screws provided. The weight produces excellent results on uneven surfaces.

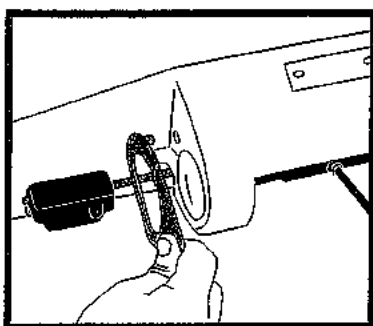


Illustration #1

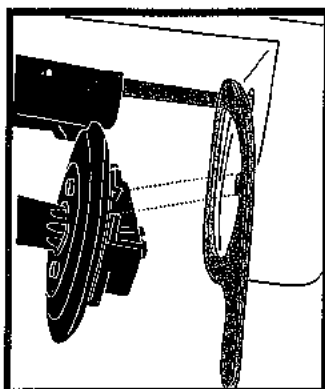


Illustration #2

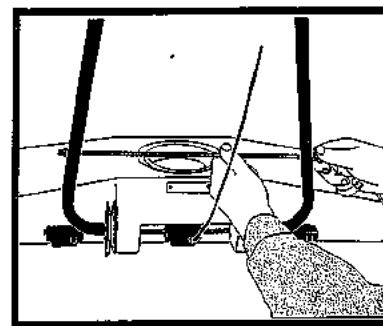


Illustration #3

● PREPARATION

To prepare for use, make the following arrangements:

- 1 Make sure floor area to be covered is dust free by dust mopping. Use a looped-end wet mop to remove dirt and stains. A solvent-soaked rag will remove stubborn dirt.
- 2 Remove the lid and pour finish into tank. It is better to pour at least one gallon of finish into the tank, even though less might be used.
- 3 Wheel the Wax-o-Matic to the area to be finished.
- 4 Decide how much area you will be covering. If a large area, determine the length you can cover in 10 seconds (see #8).

At the start, or when learning how to use:

- 1 Dispense a small amount of finish by fully depressing the actuator lever on the handle. Note that as you depress the actuator lever you will see a puddle of finish begin to develop across the back of the machine.
- 2 With the handle in the lowered position, push and pull the Wax-o-Matic a foot or so to initially get the wick pads soaked with finish. Again dispense a small puddle

and begin to pull the unit by backing up. As you do so, you will be able to see how fast the puddle is diminishing. Learn how to maintain this puddle by pulsing at regular intervals as you go down the work area.

- 3 **IMPORTANT:** Before you reach the end of the work area you must completely use up the puddle of finish. Stop dispensing finish approximately 10' to 15' before stopping point. Pull the Wax-o-Matic in a straight line, not allowing it to angle to the right or left.
- 4 Continue to follow this procedure until you are satisfied you are getting the results you want and become accustomed to operating the unit.
- 5 Now you are ready to turn around so you are walking forward while pulling the unit and dispensing finish.

A few hints for best results:

- 1 Do not over dispense finish or hold actuator lever down while walking or you will flood finish around the ends of the unit, leaving heavy edges on the floor.
- 2 Do not pulse the unit at the end of the work area where you will be stopping.

- 3 There are two ways to turn the unit around at the end of an aisle or work area:
 - a While still moving, push the handle down toward the floor. Pivot the Wax-o-Matic around to a slight overlap position for return. Raise the handle back up and continue applying finish.
 - b When reaching the end of an aisle rotate the unit by dragging it around. This will leave a rounded area which can later be lapped over when doing the cross aisle.
- 4 If coat is too thin, streaking or dry spots appear. The following steps should alleviate any problems:
 - a Do not try to apply finish too light. Apply large puddle.
 - b Dispense finish often enough to keep an even coat.
 - c If you are desiring a heavier coat, change to heavier pads.
- 5 For best results, floor area to be finished should be clean from grit, loose debris or any dust. (See step #1 under Preparation).
 - a The Wax-o-Matic will pick up any debris as you go along and this will in time accumulate on the wicks causing a lack of smoothness in finish application.
 - b Do not allow grit to accumulate on the wicks. Periodically brush them clean with your hand or a soft brush.
 - c If dust or debris gets worked into pads and is not allowing a smooth application take them off and clean them or quickly replace them with a spare set.
- 6 Keep a towel handy when filling the unit and wipe any spillage off the Wax-o-Matic immediately with the damp towel.
- 7 For best results always put at least one gallon of finish into the Wax-o-Matic Speed Finisher.
- 8 Do not try to apply finish to too large an area at one time. The length of the swath should be only what you can comfortably do in 5 to 10 seconds. This will allow the finish to remain wet enough so that when you overlap, the new swath will blend into the area you overlapped, without streaking.
- 9 The air hole in the lid must be kept open or finish will not dispense from tubes.
- 10 When putting the lid on the unit lightly push down on the lid and twist it about 1" into its sealed position.
- 11 When taking the handle off the Wax-o-Matic, flex handle outward to remove from the sockets.

Finishing small or confined areas:

- 1 The Wax-o-Matic may be pushed or pulled to get into small areas. Dispense a small amount of finish. Push and pull the Wax-o-Matic a foot or so to work the finish into the wick pads. Slide the unit over by using the leverage of the handle grips. Allowing a little overlap, pull the unit back. Follow this procedure until you complete the area.

- 2 If you are in a confined area where you need to do some maneuvering of the unit and do not wish the kicker lever to engage each time the handle is raised, bring the kicker lever as far up as possible. This will engage the kicker lever catch. The kicker lever will stay in the up position until you push it down and release the catch.

When moving to another aisle or area:

- 1 Simply push handle down, roll the Wax-o-Matic to the next aisle, then raise handle and continue.
- 2 When quitting or when moving a long distance, change the handle position by lifting the handle to the upright position for ease of transporting.
NOTE: If unit is full be careful not to tip too far back as it may drip finish out the air hole in the lid.

Storing the Wax-o-Matic after use:

- 1 **IMPORTANT:** Pads should be taken off the Wax-o-Matic as soon as work is complete. Never let the pads dry out. If they become dry they will stiffen and be unusable. Replace them with new pads. The pads can remain moist between use by keeping them saturated with finish reducer. Lightly squeeze them out before reattaching to the unit.
- 2 After each use the unit should be emptied of all product through the drain valve. **IMPORTANT:** The unit should be cleaned inside and out thoroughly. Pour mineral spirits (for solvent-based fluids) or water (for water-based fluids) directly into unit. Shake unit vigorously to clean inside of tank. Pulse unit several times to clean dispensing ports. Drain unit. Wipe the outside of unit with damp cloth. **IMPORTANT:** Use only mineral spirits or soap and water. Any other petroleum distillates or thinners will void warranty as they may cause material deterioration.
- 3 Lightly grease dispenser shutoff pads and drain tube holder.

Wax-o-Matic Limited Warranty Policy

Wilten Products, Inc., warrants that the finish applicator referred to as Wax-o-Matic Speed Finisher will be of new material and free from defects in materials or workmanship under normal, proper and intended usage for a period of 12 months from the date of sale. If during that warranty period the Wax-o-Matic becomes defective by reason of faulty material or workmanship the company will repair or replace at its option all defective materials, returned freight prepaid to Wilten Products, Inc., Atlanta, GA USA. Misuse, neglect, alteration, accident, act of God, or improper use of or repair causing damage to the Wax-o-Matic shall cancel this warranty.

The provisions of this warranty are in lieu of any other warranty, expressed or implied, written or oral (including, but not limited to any warranty of merchantability or fitness for a particular purpose), and manufacturer's liability arising out of the manufacture, sale or distribution of the Wax-o-Matic Speed Finisher or its use, whether based on warranty. Contract, negligence, or otherwise, shall not exceed the original cost of the unit. In no event shall the company be liable for unintended or consequential damages including but not limited to, loss of profits or use damages arising out of the use of the Wax-o-Matic Speed Finisher.